

Tekskil 19RP Monitor – Setting Guidelines

Tekskil’s monitor operation and special features are controlled by setting values in the On Screen Display (OSD) menus



- * The **MENU** button moves you horizontally across menu columns
- * The Up (▲) and Down (▼) buttons move you vertically within a column – **highlight** indicates current function.
- * To change a setting, press the **MENU** button when the desired setting is highlighted. The setting is confirmed by
- * Exit the OSD by pressing until the OSD screen disappears.

Example: Input Select – Main Picture Channel – Video Source

Main Menu		
Input Select	Main Picture Channel	VGA
Image Adjustments	Scan Inputs	Component
Color Adjustment	PIP Mode	DVI
Video Settings	PIP Channel	S-Video
Scaling Adjustments	PIP Size	✓ Composite Video
System Settings	PIP hor Position	Tuner
	PIP ver Position	
	Swap Main & PIP	

Note: Setting Composite Video as the default ensures minimum display recovery time if sync is interrupted

Input Select

Main Menu		
Input Select	Main Picture Channel	✓ Composite Video
Image Adjustments	Scan Inputs	✓ Off
Color Adjustment	PIP Mode	✓ Off
Video Settings	PIP Channel	
Scaling Adjustments	PIP Size	
System Settings	PIP hor Position	
	PIP ver Position	
	Swap Main & PIP	

Note: setting Scan Inputs to Off enhances video response by turning off the continuous scanning feature

Color Adjustment

Main Menu		
Input Select	Brightness	45
Image Adjustments	Contrast	60
Color Adjustment	Saturation	50
Video Settings	Hue	50
Scaling Adjustments	Fleshtone	0
System Settings	Backlight	81
	Auto Color Adjustment	
	Advanced	

Scaling Adjustment

Main Menu		
Input Select	Scaling Mode	✓ Expand
Image Adjustments	Picture Flip	✓ Mirror Vertical
Color Adjustment		
Video Settings	Zoom	100
Scaling Adjustments	Hor. Pan	0
System Settings	Ver Pan	0
	Hor. Stretch	100
	Ver. Stretch	100

System Settings

Main Menu		
Input Select	OSD Timeout	60
Image Adjustments	OSD Hor. Pos.	50
Color Adjustment	OSD Ver. Pos.	50
Video Settings	OSD Blend	3
Scaling Adjustments	OSD Orientation	
System Settings	OSD Language	
	Reset to Default	
	DISPLAY SIZE	

Flex-Screen

Instantly adjust the prompt display size so it’s just right for the talent.
 15” for close-ups prevents ‘shifty-eyes’, 19” super-size takes the squint out of far shots and 17” for in-between.
 Only from Tekskil